
## **HERZ Double Connection Distributor**

for two-pipe systems, symmetric model with shutoff and draining functions

Standard Sheet for


3033

Edition 0700 (0400)

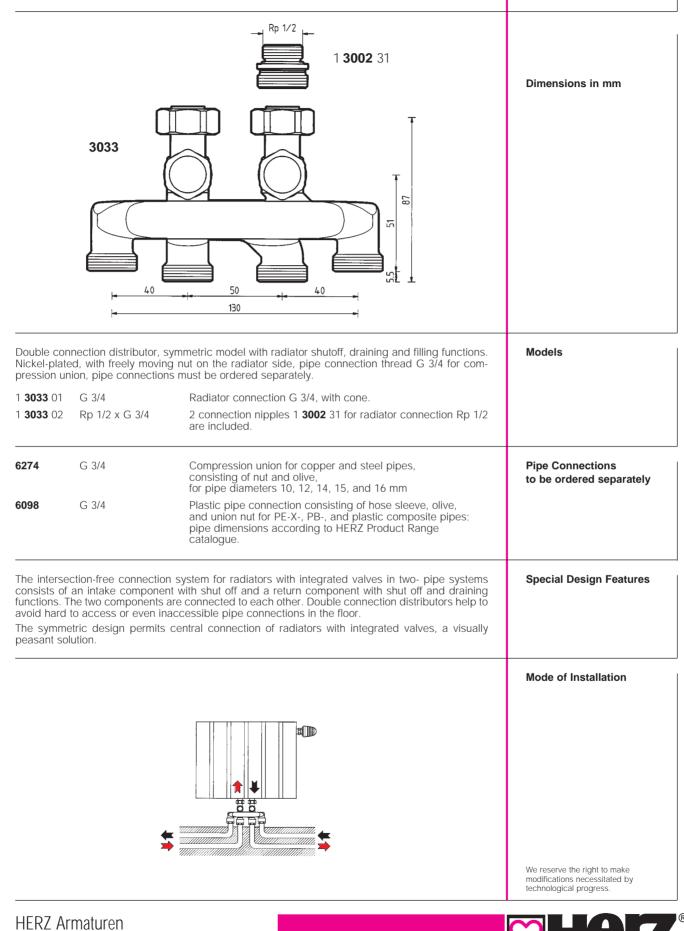

Richard-Strauss-Straße 22 • A-1230 Wien

Two-pipe water heating systems with calibrated steel, copper or plastic pipes.	Field of Application
Max. operating temperature: 110 °C Max. operating pressure: 10 bar	Operating Data
Hot water purity in accordance with ÖNORM H 5195 and/or VDI-guideline 2035. When using HERZ-compression unions for copper and steel pipes, take into account the perperature and pressure ratings according to EN 1254-2:1998, as shown in Table 5.	Unions for Copper and
Field of Application	Steel Pipes
8	
A A A A A A A A A A A A A A A A A A A	
0 20 40 60 80 100 120 140 Temperature °C	
Maximum operating temperature 80 °C, maximum operating pressure 4 bar, if permit	ted by the HERZ-Compression
HERZ-Armaturen.	consent of Unions for Plastic Pipes
The radiator side is equipped with two freely moving union nuts, and the seal is provided and soft seal. For pipe connection threads Rp 1/2, 2 connection nipples (1 <b>3002</b> 31) and the seal of the se	e included.
Tighten the freely moving nuts gently with a 30-mm open-jawed spanner in order to connection elements.	protect the
	Shutting off
<ul> <li>remove cover caps</li> <li>turn clockwise with a 4-mm-Allen key (1 6615 00) up to the stop.</li> </ul>	the Radiator
The return component is equipped with a connection for draining and filling the radiator	Draining the Radiator
remove cover cap.	
<ul> <li>screw the hose connection adapter 1 0256 01 with hose connection 1 6206 01 onto the opening, and attach hose or put a collecting vessel below the opening.</li> </ul>	ne draining
<ul> <li>open for draining by means of 10-mm hexagon multi-purpose key (1 6625 00).</li> </ul>	
After shutting off at the intake and return components, the radiator can be removed, eve heating system is operating.	n while the Removing the Radiator
Do not use adjustable pliers or any similar tools which could lead to deformation of the compression union! It is recommended to use support sleeves for the pipe of the	
apartment supply line. The pipe must be deburred and calibrated properly. Lubricate the thread of the nut of the compression union with silicone oil during installati	С С
oil would destroy the O-ring of the olive. We draw attention to the HERZ-instructions for w HERZ-compression unions, and to the instructions for installation and description of the	orking with
process in the HERZ Compression Unions standard sheet.	
1 0256 01 Hose connection adapter for draining	Accessories
1 6206 01 Hose connection 1 6615 00 Allen key for shutting off	
1 6625 00 Multi-purpose key for draining	
1 <b>3002</b> 31 Connection nipple Rp 1/2 x G 3/4	Spare Part

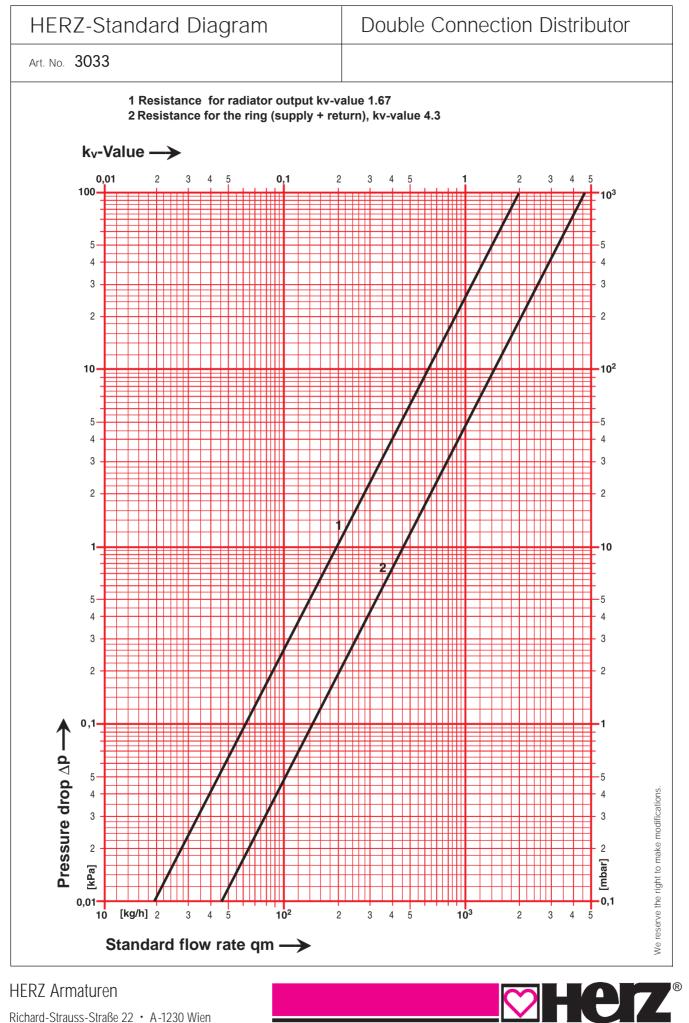

HERZ Armaturen

Richard-Strauss-Straße 22 · A-1230 Wien