
HERZ Actuator 7708, 7990

Data sheet for 7708, 7990 Issue 0623

Dimensions



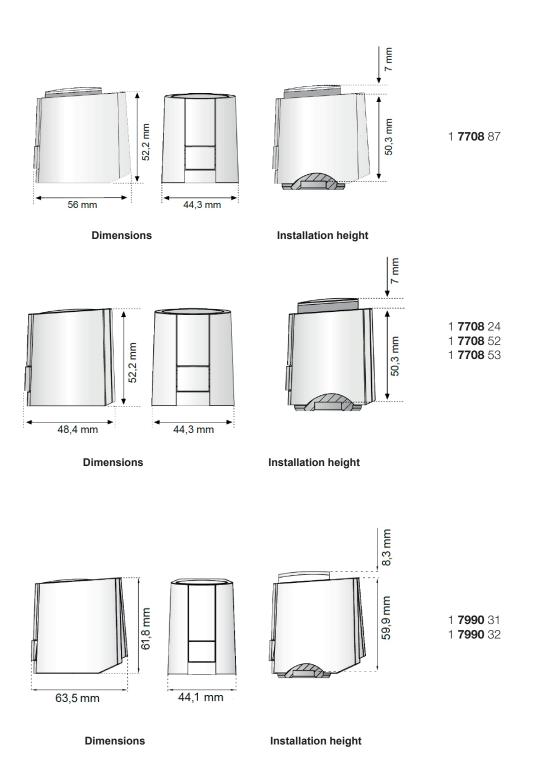

🖾 Models

- 1 7708 24 HERZ Actuator 2-point, M28 x 1.5, 230 V, 50 Hz normally open, closing force 100 N, operating voltage 230 V / AC, threaded connection M28 x 1.5, red adapter 1 7708 90 is included, max. stroke 5 mm
- 1 7708 87 HERZ Actuator 2-point with end switch, M28 x 1.5, 230 V, 50 Hz normally closed, closing force 100 N, operating voltage 230 V / AC, threaded connection M28 x 1.5, red adapter 1 7708 90 is included, max. stroke 5 mm
- 1 7708 52 HERZ Actuator 2-point, M28 x 1.5, 24 V, 50 Hz normally closed, closing force 100 N, operating voltage 24 V / AC / DC, threaded connection M28 x 1.5, red adapter 1 7708 90 is included, max. stroke 5 mm
- 1 7708 53 HERZ Actuator 2-point, M28 x 1.5, 230 V, 50 Hz normally closed, closing force 100 N, operating voltage 230 V / AC, threaded connection M28 x 1.5, red adapter 1 7708 90 is included, max. stroke 5 mm
- 1 7990 31 HERZ Actuator modulating 0..10 V, M28 x 1.5, 24 V, 50 Hz normally closed, closing force 100 N, operating voltage 24 V / AC, threaded connection M28 x 1.5, blue adapter 1 7708 85 is included, max. stroke 5 mm
- 1 **7990** 32 **HERZ Actuator modulating 0..10 V, M28 x 1.5, 24 V, 50 Hz** normally closed, closing force 125 N, operating voltage 24 V / AC, threaded connection M28 x 1.5, blue adapter 1 **7708** 85 is included, with valve path recognition, max. stroke 6,5 mm

Application 1 **7708** 87

The HERZ-Actuator 230 V with end switch is a thermoelectric valve drive for opening and closing valves and small valves used in the scope of HVAC technology. The integrated micro switch with floating contact allows direct operation of a pump or fan control unit. The HERZ Actuator 230 V with end switch is controlled by a 230 V room thermostat with two-point output or pulse-width modulation.

Application 1 7708 24, 1 7708 52, 1 7708 53

The HERZ-Actuator 230 V / 24 V is a thermoelectric valve drive for opening and closing valves on heating circuit distributors of concealed floor heating and cooling systems. The main field of application is the energy-efficient individual room temperature control in the range of building management systems and home automation. The HERZ-Actuator 230 V / 24 V is controlled by a 230 V / 24 V room thermostat with two point output or pulse-width modulation.

☑ Application 1 7990 31, 1 7990 32

The HERZ-Actuator 2-point, Proportional 5/6,5 mm is a thermoelectric actuator for the control of heating and cooling systems in direct proportion to the applied control voltage. The control of the actuators is performed by a 0-10 V DC signal via a central DDC system or by a room thermostat. The principal area of application is the building management system range.

Furthermore, the variant 1 **7990** 32 with valve path recognition automatically registers the valve path for an optimum use of the active control voltage range. This guarantees an even more precise control of all valves.

Operation

The actuating drive is switched on via an electrical contact, e.g. from a room thermostat, and starts opening or closing the thermostatic valve. The actuating movement is accomplished by an electrically-heated expansion element. When the heating current is switched off, the valve closes or opens respectively. The HERZ actuating drive is maintenance-free and offers silent operation.

S "First-Open"-Function

HERZ-actuator is delivered in a normally open state. By means of this feature it is possible the heating or cooling system operating even before an electrical wiring stage is completed. When the operating voltage is applied longer than six minutes to the actuator, then it will be unlocked and ready-for-use. Once the "First-Open"-function has been activated a bigger force is required to mount the actuator.

Emergency function

With factory setting "normally closed" the valve can be opened by removing the drive in case of a power failure.



☑ Installation 1 7708 24, 1 7708 87, 1 7708 52, 1 7708 53


The wide selection of valve adapters guarantees a perfect match of the HERZ-Actuator to almost any valve insert or manifold available on the market. Simply snap-on the HERZ-Actuator to the manually pre-installed valve adapter.


- First the valve adapter is screwed on the valve manually.
- The HERZ-Acutator is placed vertically on the valve adapter.


2.

tuator.

• The HERZ-Actuator snaps onto the valve adapter with a "click" when pressed down vertically by hand.

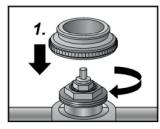


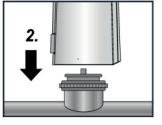


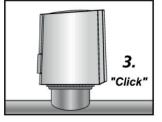


☑ Installation 1 7990 31, 1 7990 32

The valve adapter assortment guarantees a perfect match of the actuator to almost all valve inserts and heating circuit distributors available on the market. The HERZ ActuatorProportional is simply plugged on to the valve adapter previously installed manually.

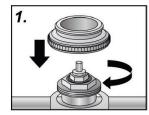


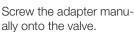



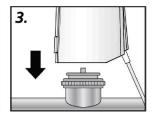


Position the HERZ Actuator manually in vertical position to the valve adapter.

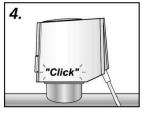

Latch the HERZ Actuator to the valve adapter by manually applied vertical pressure; this can be done noiselessly and without any problems.

Installation position

The HERZ-Actuator must be installed preferably in vertical or horizontal installation position. For "upside down" installation special circumstances (e. g. drainwater) can reduce the lifetime of the actuator.

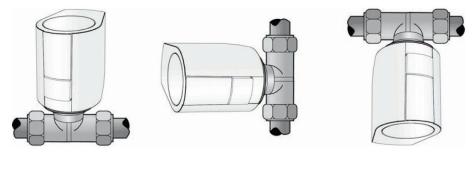

Vertical

Horizontal

Upside down



Technical data 1 7708 24, 1 7708 53

Operating voltage	230 V AC, +10%–10%, 50/60 Hz
Max. start up current	< 550 mA during 100 ms max.
Operating power	1 W ¹⁾
Stroke (actuator travel)	5.0 mm
Actuating force	100 N ±5%
Fluid temperature	0 to +100°C ²⁾
Storage temperature	-25°C to +60°C
Ambient temperature	0 to +60°C
Type of protection	IP 54 ³⁾ / II
CE conformity according to	EN 60730
Housing material/housing colour	Polyamide / light grey (RAL 7035)
Connecting cable/colour	2 x 0.75 mm ² PVC / light grey (RAL 7035)
Cable length	1 m
Weight with connecting cable (1 meter)	100 g
Surge protection according to EN 60730-1	min. 2.5 kV

1) measured with precision reference instrument LMG95 - 2) in dependence of the adapter even higher - 3) in all installation positions

☑ Technical data 1 7708 52

Operating voltage	24 V AC/DC, +20%10%
Max. start up current	< 300 mA during 2 min. max.
Operating power	1 W ¹⁾
Stroke (actuator travel)	5.0 mm
Actuating force	100 N ±5%
Fluid temperature	0 to +100°C ²⁾
Storage temperature	–25°C to +60°C
Ambient temperature	0 to +60°C
Type of protection	IP 54 ³⁾ / III
CE conformity according to	EN 60730
Housing material/housing colour	Polyamide / light grey (RAL 7035)
Connecting cable/colour	2 x 0.75 mm ² PVC / light grey (RAL 7035)
Cable length	1 m
Weight with connecting cable (1 meter)	100 g
Surge protection according to EN 60730-1	min. 2.5 kV

1) measured with precision reference instrument LMG95 - 2) in dependence of the adapter even higher - 3) in all installation positions

Technical data 1 7708 87

230 V AC, -10%+10%, 50/60 Hz
< 550 mA during max. 100 ms
1 W ¹⁾
5.0 mm
100 N ±5%
230 V AC: 5 A resistive load, 1 A inductive load
approx. 2 mm
0 - +100°C ²⁾
-25 °C to +60°C
0 to +60°C
IP 54 ³⁾ / II
EN 60730
Polyamide / light grey (RAL 7035)
4 x 0.75 mm² PVC / light gray (RAL 7035)
1 m
approx. 150 g
min. 2.5 kV

1) measured with precision reference instrument LMG95 - 2) in dependence of the adapter even higher - 3) in all installation positions



Technical data 1 7990 31, 1 7990 32

Voltage Control voltage range	24 V AC, -20 % +20 % 0 V 10 V DC
Max. start up current	< 300 mA for max. 2 Min.
Operating power	1. W ¹⁾ (1 7990 31) / 1,2 W ¹⁾ (1 7990 32)
Resistance of control voltage input	100 kΩ
Stroke	5 mm (1 7990 31) / 6.5 mm (1 7990 32)
Actuating force	100 N ±5% (1 7990 31) / 125 N ±5% (1 7990 32)
Fluid temperature	0 to +100°C ²⁾
Storage temperature	-25°C to +65°C
Ambient temperature	0 to +60°C
Degree / class of protection	IP 54 ³⁾ / III
CE conformity according to	EN 60730
Casing material / colour	Polyamid / white
Connection line / colour	3 x 0.22 mm ² PVC / white

1) measured with precision reference instrument LMG95 - 2) in dependence of the adapter even higher - 3) in all installation positions

Room thermostat

Standard room thermostats equipped with a thermal feedback loop can be used for piloting the HERZ actuating drive. If required, several drives can be connected in parallel taking the maximum admissible electrical load of the switch contact into account.

Design and planning notes

When selecting the switch contacts and mains fuses, the start up current of the heating element must be taken into account. The voltage loss in the electric lines must not exceed 10 %, ensuring that the indicated runtime is guaranteed.

Max. cable length for an actuating drive with given cable cross-sections (information with voltage drop approx. 5 %; at 230 V voltage drop is 10 V, at 24 V voltage drop is 1 V).

When using several actuating drives, the indicated cable length must be divided by the number of actuating drives connected.

Cable cross-section (mm ²)	230 V, max. length (m)	24 V, max. length (m)
2 x 0.75	1500	168
2 x 1.0	2000	224
2 x 1.5	3000	340
2 x 2.5	5000	560


Resistance values

Please refer to the HERZ standard diagrams contained in the relevant standard sheets with regard to resistance values when operating HERZ valves with HERZ actuating drives. The curves "Valve fully open" or "max." apply.

Accessory

1 7796 04 HERZ Transformer 230/24 V


The overload-proof HERZ safety transformer 230/24 V is designed for the connection of HERZ room thermostats and HERZ actuating drives and suitable for operation of 8 HERZ actuating drives max.

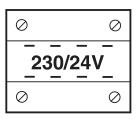


Version Protection class Protection class ISO Cl. Input voltage Fuse in input circuit Output voltage Power Quick installation on device rail Dimensions as per VDE 0551 II IP 20 T40/E 230 V 50-60 Hz, 315 mA 24 V 50 VA ref. DIN 42227/3 106 x 90 x 74 mm (B x H x T)





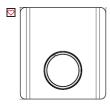

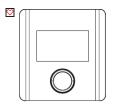

Analog	3 F799 11	Heating, temperature set-back, frost protection, 230 V~
	3 F799 12	Heating, temperature set-back, frost protection, 24 V~
	3 F799 13	Heating/ cooling, temperature set-back, frost protection and valve protection function, cooling lock, 230 V \sim
	3 F799 14	Heating/ cooling, temperature set-back, frost protection and valve protection function, cooling lock, 24 $V\!\!\sim$
Digital	3 F799 15	Heating, temperature set-back, frost protection, 230 V~
	3 F799 16	Heating, temperature set-back, frost protection, 24 V~
	3 F799 17	Heating/ cooling, temperature set-back, frost protection and valve protection function, cooling lock, 230 $V\!\!\sim$
	3 F799 18	Heating/ cooling, temperature set-back, frost protection and valve protection function, cooling lock , 24 $V\!\!\sim$

1 change-over contact, set value range 5-30°C. Adjustment of set value by means of mechanical

Adapter for Motor Valve Drives

1 **7708** 90 Colour red, adapter M28 x 1,5 for the use with HERZ- heating circuit distributor and HERZ valves (incl. 4002, 4006 and 7217-GV) in combination with 2-point-actuators.

Electromechanical Room Temperature Controller

limitation of set value range

- 1 7708 85 Colour blue, adapter M28 x 1,5 for HERZ 4002, 4006 and 7217 GV in combination continuous actuators 1 7990 3x and 1 7990 4x
- 1 **7708** 86 Colour light gray, adapter for the use with: Oventrop thermostatic valves and distributors made of stainless steel, Oventrop Cocon, Cocon4, Viega distributors made of stainless steel, T&A, TBV-CM, TBV-CMP
- 1 7708 80 Adapter M 28 x 1,5 for HERZ-actuating drive, colour grey for the use with 7217-98-V, 7217-99-V
- 1 **7708** 98 Adapter M 30 x 1,5 for the use with HERZ Ventilen with M 30 x 1,5 connection thread and regulating valves 7760, 7762 and 7763
- 1 **7708** 82 Adapter M 30 x 1,5 for the use with HERZ plastic distributors.

5
σ
_
ō
<u>o</u>
õ
÷.
க்
š
-
, co
>
Ł
ā
÷
Q
g
Ö
Ā
\geq
8

es	TS-90-V TS-90-FV TS-90-E TS-90-E TS-E (M28 × 1,5)		*22 *22 *22			
Valve types	TS-98-V TS (M28 × 1,5) (M3	D	*			
	DE LUXE DE LUXE TS-98-V TS-3000 VUA (M28×1,5)	D	*	Adapter 1 7708 90 has to be ordered separately	Adapter 1 7708 80 has to be ordered separately	A demtar 1 7700 00 here to be and and a concerned
	DE LUXE TS-3000	Ø	*	s to be ordere	s to be ordere	+
	TS-90-DE TS-98-V LUXE DE LUXE	Ø	*⊠	7708 90 has	7708 80 has	
	TS-90-DE LUXE	Ø	*	Adapter 1	Adapter 1 7	
		2-Point-Regulation 1 7708 24 1 7708 52 1 7708 53 1 7708 87	continuous Regulation 1 7990 31 1 7990 32	*	**	***
		red	ənıq			
		actuators	e pue si	ətc	lep	A

Adapter-Valve-Diagram

		_		·			
	Calis-TS (M28 × 1,5)		Ø	*			
	TS-90 (M28 × 1,5)		Ø	* 🖸			
	TS-3000 (M30 × 1,5)		***	***			
	TS-3000 (M28 × 1,5)		Ø	*			
	TS-98-VH (M30 × 1,5)		* **	***			
ypes			***	***			
Valve types	TS-98-V TS-99-FV TS-98-VH TS-90-H DIN DIN (M30 × 1,5) (M30 × 1,5)		***	***	ly	ely	ly
	TS-99-FV DIN	(M28 × 1,5)	D	*	be ordered separately	be ordered separately	be ordered separately
	NIC DIN	(M28 × 1,5)	D	*	s to be orde	s to be orde	s to be orde
	NIQ DIN	(M28 × 1,5)	D	*	Adapter 1 7708 90 has to	Adapter 1 7708 80 has to	Adapter 1 7708 98 has to
	DIN DIN	(M28 × 1,5)	D	*	Adapter 1	Adapter 1	Adapter 1
			2-Point-Regulation 1 7708 24 1 7708 52 1 7708 53 1 7708 87	continuous Regulation 1 7990 31 1 7990 32	*	**	***
			red	ənıq			
			actuators	pue si	ətc	lep	\forall



Page 7

E
B
5
D
ā
T
Ð
>
a
2
<u> </u>
Ð
÷
<u>o</u>
a
Ö
4
-


1 1	-98- 1,5	ىد	ىد			
	7217-98-V (M28×1,5)	*	*			
	7217 GV (M28 x 1,5)	D	Ø			
	7217 V (M28 × 1,5)	Ø	*			
	4006 (M28 x 1,5)	Ø	Ø			
	4002 (M28 × 1,5)	Ø	Ø			
ypes	VUA-50 (M30 x 1,5)	***	***			
Valve types	VUA-40 (M28 × 1,5)	Ø	Ď	aly	əly	ely
	VUA- AHA (M28 × 1,5)	Ø	*	red separat	red separat	red separat
	VTA-50 (M30 × 1,5)	****	***	Adapter 1 7708 90 has to be ordered separately	Adapter 1 7708 80 has to be ordered separately	Adapter 1 7708 98 has to be ordered separately
	VTA-40 (M28 × 1,5)	D	*	7708 90 ha	7708 80 ha	7708 98 ha
	Calis- TS-E (M28 × 1,5)	D	*	Adapter 1	Adapter 1	Adapter 1
		2-Point-Regulation 1 7708 24 1 7708 52 1 7708 53 1 7708 87	continuous Regulation 1 7990 31 1 7990 32	*	**	***
		keq	ənıq			
		actuators	pue si	ətc	lep	A

Adapter-Valve-Diagram

2				Valve types		1 1 1	0 1 1	0 1 1
7217-99-FV Z (M28×1,5) Z		NU	7723 Zonenventil (M28 x 1,5)	7760 RD (M28 x 1,5)	7760 RD 7761 RD (M28 × 1,5) (M28 × 1,5)	7760 (M30 × 1,5)	7762	7763
2-Point-Regulation 1 7708 24 1 7708 52 1 7708 53 1 7708 87			Ø	Ø	Ø	***	***	* **
continuous Regulation 1 7990 31 1 7990 32			*	*	*	***	***	***
* Adapter 1 7708 90 has to be ordered separately	Adapter 1 7708	8	90 has to I	be ordered s	separately			
** Adapter 1 7708 80 has to be ordered separately	Adapter 1 7708	00	80 has to I	be ordered s	separately			
*** Adapter 1 7708 98 has to be ordered separately	Adapter 1 7708	w	3 98 has to l	be ordered s	separately			




Electric connections 1 7708 53

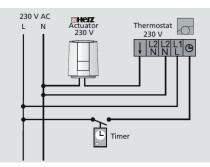


We recommend usage of the following lines for installing a 230 V system: Light plastic-sheathed cable NYM 1.5 mm² or flat webbed building wire NYIF 1.5 mm²

Electric connections 1 7708 52

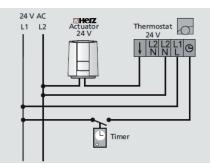

We recommend usage of the following lines for installing a 24 V system: Light plastic-sheathed cable NYM 1.5 mm² or flat webbed building wire NYIF 1.5 mm²

Electric connections 1 7708 87

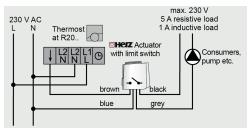


Light plastic-sheathed cable NYM 1.5 mm² or flat webbed building wire NYIF 1.5 mm²

We recommend usage of the following lines

for installing a 230 V system:

Electric connections 1 7990 31, 1 7990 32

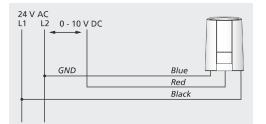

Calculation of maximum cable length (copper cable) for 24 V rated voltage L = C x A / n

L Cable length in m; K Constant (269 m/mm²); A Conductor crosssection in mm²; n Number of Alpha-Actuators

We recommend the following cables for installing a 24 V system: Telephone line J-Y(ST)Y 0.8 mm2 Light plastic-sheathed cable: NYM 1.5 mm² Flat webbed building wire: NYIF 1.5 mm²

Transformer: A safety isolating transformer according to EN 61558-2-6 must always be used. Transformer dimensioning results from the making capacity of the HERZ-Actuators. Rule-of-thumb formula: Ptransformer = 7.2 W x nn = Number of OEM Actuators

Note: All diagrams are for illustrating purposes only and do not claim to be complete. All information contained in this brochure corresponds to the state of knowledge at the time of going to print and is intended for informational purposes only. We therefore reserve the right to make any changes subject to advancing technology. The images are symbolic representations only and can therefore visually deviate from the actual appearance of products. Any deviations in color are due to typography. Subject to country-specific product variants. We reserve the right to change specifications and functions without notice. Please contact your nearest HERZ subsidiary if you have any questions.