

HERZ-Changing Tool **Changefix**

Operating manual for

7780

Edition 0202

HERZ-Changing Tool for HERZ-TS-90 Thermostatic Valve Upper Parts

Function:

HERZ-Changefix is a water-tight device that can be mounted on to the valve. Thanks to its liquid lock function, this tool allows the valve upper part to be changed or to clean the seat seal at the spindle while the system is under pressure.

Field of application:

HERZ-TS-90, HERZ-TS-90-E, HERZ-TS-90-V, HERZ-TS-90-kv:

All models, dimensions 3/8" - 3/4"

HERZ-TS-kv, HERZ-TS-DIN, old version, all models

Visual marking of valves: External thread for installation of thermostatic head is found on the outer body, valve upper part is screwed into valve.

- Disassembly of valve upper part for inspection and cleaning
- Change and/or renewing of valve upper part
- Modification to model HERZ-TS-90/ -V/ -kv

Page 2

HERZ-DR-T-90: All models, dimensions 3/8" - 3/4"

- Disassembly of valve upper part for inspection and cleaning
- Change of spindle seal
- Change and/or renewing of valve upper part
- Modification to model HERZ-TS-90/ -V/ -kv

Page 3

Measuring of differential pressure

The application of

HERZ-Changefix + pressure measuring accessories + differential pressure measuring device

enables measurement of differential or static pressure of the closed valve.

Page 4

Article numbers:

- | | |
|------------------|---------------------------------|
| 1 7780 00 | HERZ-Changefix, Changing tool |
| 1 7780 04 | Set of seals |
| 1 7781 00 | Pressure measuring accessories |
| 1 8900 05 | HerzCOMP 650 measuring computer |

We reserve the right to make modifications necessitated by technical progress.

HERZ Armaturen


A-1230 Wien, Richard-Strauss-Straße 22
e-mail: office@herz-armaturen.com www.herz-armaturen.com



Operating Manual HERZ-TS-90, HERZ-TS-90-E, HERZ-TS

1. Remove thermostatic head, hand wheel or screw cap.
2. Loosen upper part with 18 mm square key, anticlockwise.
3. Unscrew HERZ-Changefix coupling piece (6) and lock (4).
4. Fingertight fasten union nut (7) and seal (2).
5. Close draining valve (3).
6. Open ball valve (5) by means of handle (8).
7. Push control spindle (1) towards valve until nut is catching.
8. Screw out upper part, anticlockwise.
9. Slowly draw-off control spindle (1) from valve until stop.
The rubber ring holds the upper part in the nut and transports the upper part to the lock (4).
10. Close ball valve (5).
11. Open draining valve (3) placed above collecting wessel and drain lock (4).
12. Unscrew seal (2), anticlockwise, and pull actuating rod (1) from lock (including upper part).
13. Pull thermostatic upper part from nut, clean and/or change it.
14. Put in cleaned or new thermostatic upper part.
15. Put in control spindle (1) with upper part in lock and fingertight fasten seal (2), clockwise.
16. Close draining valve (3) and open ball valve (5).
17. Slowly put in control spindle (1) towards valve until stop.
18. Screw in thermostatic upper part in valve, clockwise
19. Open draining valve (3) placed above basin and drain lock (4).
20. Unscrew coupling piece (6) and lock (4) from valve.
21. Fasten thermostatic upper part with 18 mm square key, maximum taper 20 Nm.
22. Install thermostatic head, hand wheel or screw cap.

HERZ-Changing Tool Changefix Technical manual

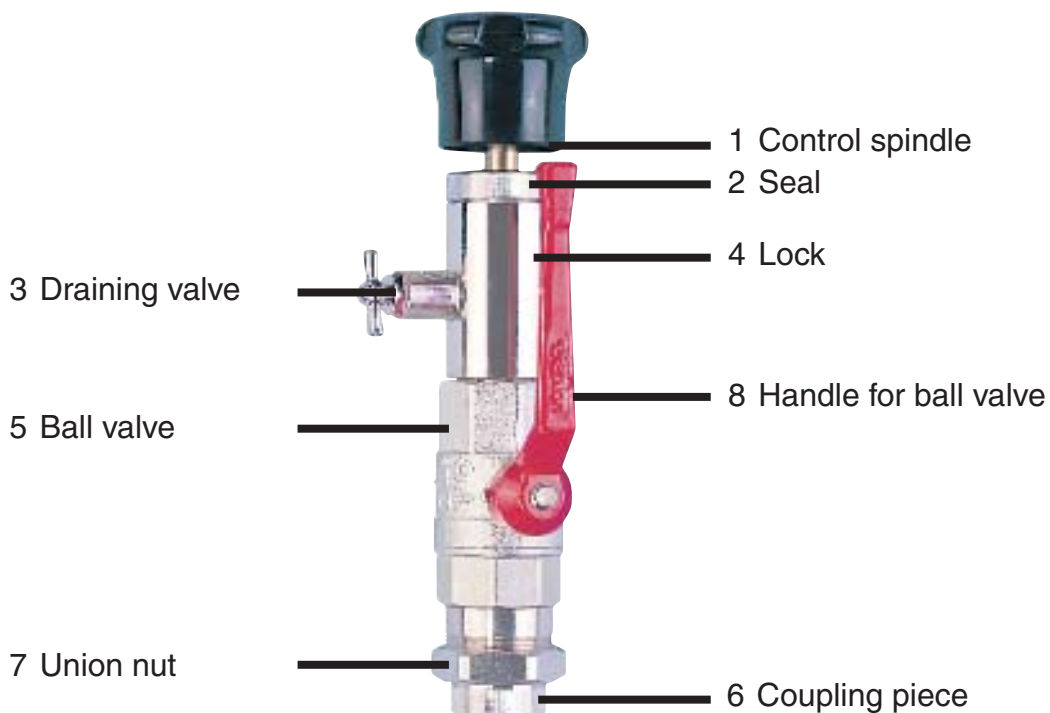

Attention: All O-rings must be damage-free. Only then, water-tight operation and safety can be guaranteed!

Change of O-Ring	Disassembly of HERZ-DR-T-90 Valve Upper Part	Change to Thermostatic Operation
Close valve spindle until stop, clockwise	Open valve spindle until stop, anticlockwise	
Unscrew hand wheel disk, draw-off hand wheel		
Loosen O-ring screw with 18 mm square key, anticlockwise	Loosen upper part with 18 mm square key, anticlockwise	
Unscrew HERZ-Changefix coupling piece ⑥ and lock ④		
Fingertight fasten union nut ⑦ and seal ②		
Close draining valve ③		
Open ball valve ⑤		
in O-ring nut	Push control spindle ① towards valve until hexagonal nut locks	at valve upper part
Unscrew O-ring nut and/or upper part, anticlockwise		
Slowly draw-off control spindle ① from valve until stop. The rubber ring holds the upper part in the nut and transports the upper part to the lock ④		
Close ball valve ⑤		
Open draining valve ③ placed above collecting wessel and drain lock ④		
Unscrew seal ②, anticlockwise, and draw-off actuating rod ① and upper part from lock		
Replace O-ring by new one	Clean valve upper part or replace it by new one	Replace valve upper part by thermostatic upper part
Put in control spindle ① and upper part in lock and fingertight fasten seal ②, clockwise		
Close draining valve ③ and open ball valve ⑤		
Slowly put in control spindle ① towards valve until stop		
Screw in O-ring nut, clockwise	Screw in valve upper part, clockwise	Screw in thermostatic upper part, clockwise
Open draining valve ③ placed above collecting wessel and drain lock ④		
Unscrew coupling piece ⑥ and lock ④ from valve		
Fasten O-ring screw with 18 mm square key, maximum taper 15 Nm	Fasten valve upper part with 18 mm square key, maximum taper 15 Nm	Fasten thermostatic upper part with 18 mm square key, maximum taper 20 Nm
Installation of hand wheel and hand wheel disk		Installation of thermostatic head

HERZ-Changing Tool **Changefix**

Pressure Measuring Accessories

Operating manual for

7781

Edition 0202

Function:

The HERZ-pressure measuring accessories enable measuring of differential or static pressure of the closed valve. The measuring is done with HERZ-Changefix Changing tool and HERZ-measuring computer Flow Plus 8903.

Field of application:

HERZ-TS-90, HERZ-TS-90-E, HERZ-TS-90-V, HERZ-TS-90-kv

HERZ-DR-T-90

HERZ-TS-DIN, old model

HERZ-TS-kv, old model

Parts:

The accessories set contains a measuring spindle with universal seat piece and measuring valve locking piece.

Measuring process:

In order to measure the pressure a measuring spindle including seat piece and measuring valve is needed. After disassembly of upper part, the measuring spindle is screwed in valve (through lock). The measuring piece at the end of the rod measures in front of the valve seat, the draining valve at the lock measures behind the valve seat. Thanks to this procedure, the differential pressure of the closed valve can be measured. The measuring pieces can also be used to measure static pressure.

For the connection and measuring process please see operating manual of the HERZ-measuring computer.

After finishing the measuring process, unscrew the spindle, pull it back, close ball valve and drain the lock. After opening of seal, the valve upper part can be re-installed.

For assembly and disassembly of the corresponding valve upper part, please refer to the operating manual of HERZ-Changefix.

0477800/030-0202 We reserve the right to make modifications

HERZ Armaturen

A-1230 Wien, Richard-Strauss-Straße 22
e-mail: office@herz-armaturen.com www.herz-armaturen.com

