


HERZ 7217 GV for thermostatic control

Data sheet **7217 GV**, Issue 0915

Size in mm

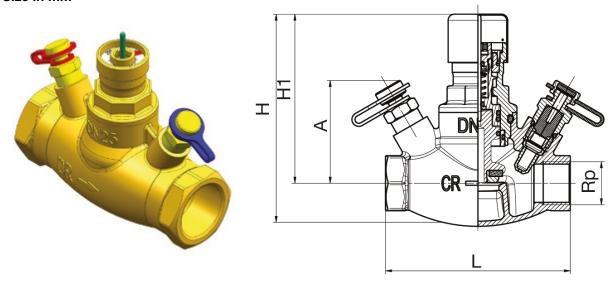

| Order number | DN | Rp | L | Н | H1 | H + actuator | Α | M | kvs |
|------------------|----|-----|-----|-----|----|--------------|----|---------|------|
| 1 7217 71 | 15 | 1/2 | 90 | 101 | 82 | 162 | 50 | M28x1,5 | 5,00 |
| 1 7217 72 | 20 | 3/4 | 97 | 101 | 82 | 162 | 50 | M28x1,5 | 5,60 |
| 1 7217 73 | 25 | 1 | 110 | 114 | 88 | 168 | 50 | M28x1,5 | 7,78 |

◯ Control Valve HERZ 7217 GV with test points

Straight model with pre-settable thermostatic upper part, brass version, pipe connection on both sides with Rp female thread. Externally adjustable continuous pre-setting. The pre-setting key (1 4006 02 or 1 6625 00) has to be ordered separately. 2 test points are mounted next to the thermostatic insert, body made of DZR brass. M 28 x 1.5 thread connection for actuators.

Technical data

Max. operating pressure 16 bar Max. differential pressure on the body 4 bar Max. differential pressure on the seat 4 bar

Min. operating temperature 2 °C (pure water) - 20 °C (frost protection) Min. operating temperature

Max. operating temperature 130 °C Stroke 4 mm

Body material DZR brass (CC752S) Bonnet material DZR brass (CW602)

Sealings and O-rings **EPDM**

Water purity in accordance with the ÖNORM H 5195 and VDI 2035 standards Ethylene and propylene glycol can be mixed to a ratio of 25 - 50 vol. [%].

documentation when using ethylene glycol products for frost and corrosion protection.

HERZ compression adapters for copper and steel pipes, allowable temperature and pressure ratings according to EN 1254-2 1998 Table 5. HERZ plastic pipe connections max. operating temperature 95 °C and max. Operating pressure 10 bar, if approved by the pipe manufacturer. Ammonia contained in hemp can damage brass valve bodies, EPDM gaskets can be affected by Mineral oils lubricants and thus lead to failure of the EPDM seals. Please refer to manufacturers



Application

Heating and Cooling for Fan coils and other terminal units, for control and balancing with high accuracy and good repeatability. Also used as zone control valve for heating and cooling circuits.

Flow direction

When installing the valve the flow direction arrow must be followed.

Pre-setting

The valve setting is clearly shown in percent. The preset value can be easily adjusted. The preset valve can be isolated at any time or adjusted to the required flow rate.

| DN | 15 | 20 | 25 |
|----------|------|------|------|
| kvs | 5,0 | 5,6 | 7,78 |
| Position | kv | kv | kv |
| 1,25% | 0,08 | 0,06 | 0,04 |
| 2,5% | 0,19 | 0,18 | 0,18 |
| 5% | 0,37 | 0,41 | 0,49 |
| 10% | 0,67 | 0,70 | 1,12 |
| 15% | 0,94 | 0,95 | 1,50 |
| 20% | 1,20 | 1,19 | 1,83 |
| 25% | 1,46 | 1,42 | 2,12 |
| 37,5% | 1,91 | 1,92 | 3,22 |
| 50% | 2,67 | 2,60 | 4,30 |
| 62,5% | 3,34 | 3,56 | 5,42 |
| 75% | 4,00 | 4,35 | 6,31 |
| 87,5% | 4,61 | 5,08 | 7,17 |
| 100% | 5,00 | 5,60 | 7,78 |

☑ Test points

Two test points are fitted on the same side of the valve and factory sealed. Thanks to this arrangement they are easily accessible and measurement devices can be quickly fitted, no matter in what position the valve has been installed.

Other Versions

| 7217 TS-98-V | DN 15 | Thermostatic Regulating Valve STROMAX TS-98-V Straight |
|---------------|-----------|---|
| | | model with test points, G (male thread) |
| 7217 TS-99-FV | DN 15 | Thermostatic Regulating Valve STRÖMAX TS-99-FV Straight |
| | | model with test points, G (male thread) |
| 7217 V | DN15-DN20 | Thermostatic Regulating Valve HERZ-7217-V with integral |
| | | fixed orifice and test points, DN15 (female thread) |


Accessories and spare parts

| 1 4006 02 | HERZ pre-setting key |
|------------------|---|
| 1 8900 04 | Measuring computer |
| 1 8904 02 | Measuring computer |
| 1 0284 01 | Test point, blue cap |
| 1 0284 02 | Test point, red cap |
| 1 0284 00 | Test point adapter set |
| 1 7708 | HERZ actuating drive for two-point or pulse control |
| 1 7990 | HERZ actuating drive for continuous control |



☑ Installation

The valve is fitted in the supply or return flow in the showed orientations. The arrow on the valve body should align with the direction of flow. It is recommended that an isolation valve is fitted both upstream and downstream of the control valve.

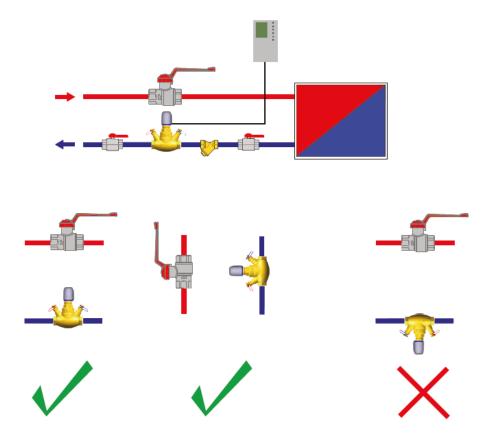

All specifications and statements within this document are according to information available at the time of printing and meant for informational purpose only. Herz Armaturen reserves the right to modify and change products as well as its technical specifications and/or it functioning according to technological progress and requirements. It is understood that all images of Herz products are symbolic representations and therefore may visually differ from the actual product. Colours may differ due to printing technology used. In case of any further questions don't hesitate to contact your closest HERZ Branch-office.



| HERZ standard diagram | 7217 GV |
|-----------------------------|--------------------|
| Order Nr.: 1 7217 71 | Dim. DN 15 |
| k _v -value | 1 10 1000 |
| 50 | |
| %5 %10 %20 %25 | %50 %75 %100 |
| 1 0,5 | [mpm] |
| flow rate qm | |



| HERZ standard diagram | 7217 GV |
|--|------------|
| Order Nr.: 1 7217 72 | Dim. DN 20 |
| | Dim. DN 20 |
| 0,5 1 [kg/h] 5 10 50 100 1 now rate qm | 0,5 |



| HERZ standard diagram | 7217 GV |
|-----------------------------------|---|
| Order Nr.: 1 7217 73 | Dim. DN 25 |
| k,-value | 0,5 1 5 1 0 |
| 100 | 100 |
| 50 | %50/ |
| or E | |
| %10 %10 %20 | %75 %100 |
| ¹⁰ %25 | 10 |
| | <i>//_///////////////////////////////</i> |
| 5 | 5 |
| | |
| | |
| | // ///// |
| 0,5 | 0.5 |
| | //-////// |
| 1 | |
| P [Red] | |
| 1 [kg/h] 5 10 50 100 flow rate qm | |